

LZDB DUBNICA

ARP 485949N 0181132E

771 ft (235 m)

BRATISLAVA INFO (WEST)

124,300



DUBNICA TRAFFIC

122,340

RWY

05L/23R

1 100 m

05R/23L

1 100 m

VFR day

Circling:

1 800 ft (550 m) AMSL

Public Domestic

MON-FRI O/R

OCT-MAR: SAT-SUN

0800-1400 (0700-1300)

APR-SEP: SAT-SUN:

0600-1400

+421/903/76 02 32

+421/903/32 22 57

Aeroklub Dubnica nad Váhom


Letisko Slávnica č. 8

018 54 SLÁVNICA

Slovak Republic

akdubnica@gmail.com

www.akdubnica.sk

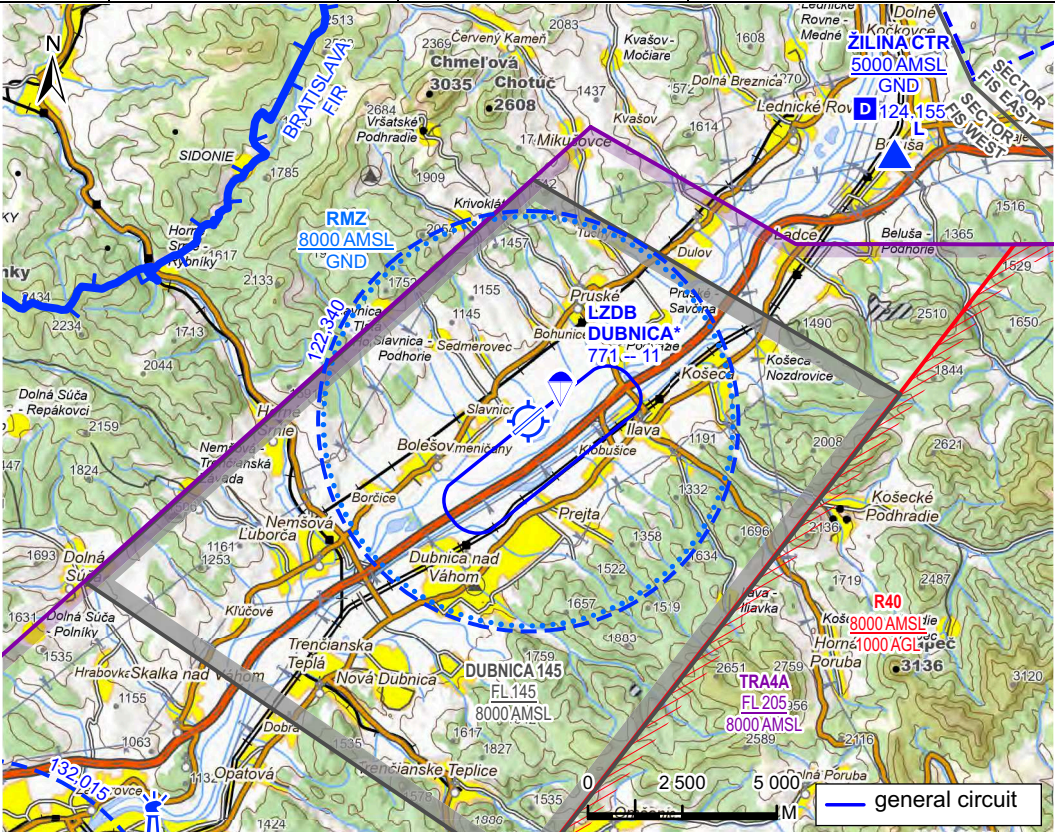

Last change: SECTOR FIS EAST and SECTOR FIS WEST established

FL 195

FL 180

FL 160

FL 140

FL 120

10 000 ft

8 000 ft

6 000 ft

4 000 ft

2 000 ft

TRENCÍN ATZ

DUBNICA ATZ

DUBNICA RMZ

ŽILINA QTR

ŽILINA TMA 1

TRA4A

R40

DUBNICA 145

© LETOVÉ PREVÁDZKOVÉ SLUŽBY SLOVENSKEJ REPUBLIKY, štátny podnik

NR 087

LZDB DUBNICA

ARP 485949N 0181132E

771 ft (235 m)

DUBNICA TRAFFIC 122,340						
RWY	MAG direction	TORA (m)	TODA (m)	ASDA (m)	LDA (m)	Strength
05L	045°	1 100	1 200	1 200	1 100	12 000 kg/0,55 MPa
23R	225°	1 100	1 200	1 200	1 100	12 000 kg/0,55 MPa
05R	045°	1 100	1 200	1 200	1 100	12 000 kg/0,55 MPa
23L	225°	1 100	1 200	1 200	1 100	12 000 kg/0,55 MPa



All the year, snow clearance is not provided.

Limited, O/R 24 HR PN

O/R, accommodation at the airport - 50 beds. Hotels in the town Dubnica and in its vicinity.

NIL

Limited, O/R PN

Emergency call: 112
Hospital in the town Ilava.

Restaurant at AD.

Train, bus

1. Local traffic regulations

For taxiing is used grass runway side stripe west from RWY 05L/23R or by the instructions of Dubnica TRAFFIC.

Aerodrome traffic circuits:

RWY 23L - left hand (east) traffic circuits

RWY 05R - right hand (east) traffic circuits

For take-off from RWY 05L/23R all turns shall be executed to E only.

RWY 05R/23L is used for winch launching of gliders.

School and training flights are performed by Flight School and Dubnica Aeroclub.

Parachuting may take place. Dropping area is located in the N part of the RWY.

2. Charges

NIL

3. Additional information

For Dubnica aerodrome the parachute symbol means a navigation warning of parachute jumping performed within the ATZ.

The navigation warning is effective year round from SR till SS.

The parachute symbol is shown on the Aeronautical Chart - ICAO 1 : 500 000 and on the Aerial Sporting and Recreational Activities Index Chart.

The aerodrome operator or person responsible for executing of parachute jumping at the aerodrome shall report by phone commencement of parachute jumping at least 30 minutes in advance and termination without delay to the Bratislava FIC unit.

In the Dubnica 145 airspace based on coordination with the ACC, a parachute jumping up to FL 140 can take place.

West of the airport expect airdrop aircraft in descending from para drop from FL 140.