
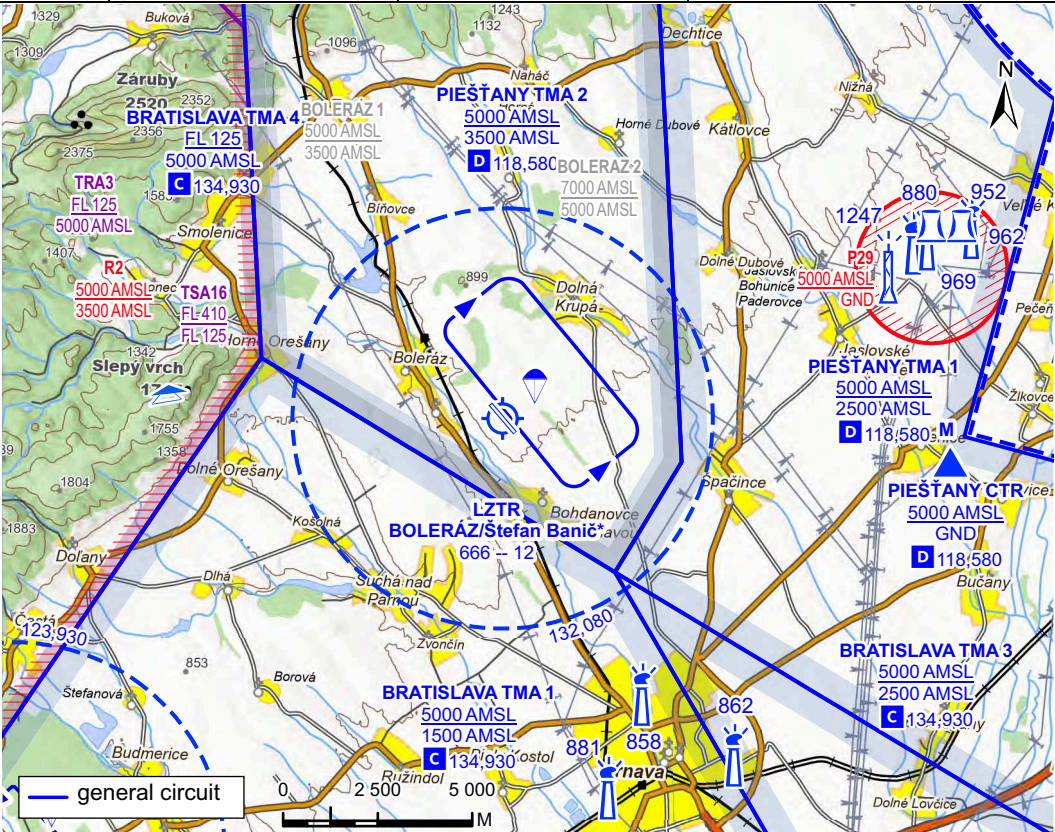


LZTR BOLERÁZ/Štefan Banič			BRATISLAVA INFO (WEST) 124,300	
ARP 482713N 0173135E		666 ft (203 m)		
BOLERÁZ TRAFFIC 132,080		ŠTEFÁNIK RADAR 134,930		PIEŠŤANY TOWER 118,580
RWY 14/32 1 200 m		+421/903/30 00 00 (SK) +421/903/90 09 73 (SK, EN) Aeroklub Trnava, o. z. Letisko 263 919 08 BOLERÁZ Slovak Republic aktrnava@gmail.com www.lztr.sk		
VFR day	Circling: MNM 1 000 ft (300 m) AGL			
	Public Domestic			

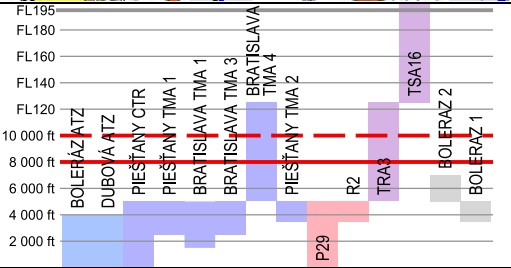


Noise abatement procedures Circling shall be executed avoiding Dolná Krupá obec and its part Potôčky. For arrivals and departures from/to LZTR not overfly Boleráz, Šelpice and Bohdanovce nad Trnavou villages.	
Last change: SECTOR FIS EAST and SECTOR FIS WEST established	

LZTR BOLERÁZ/Štefan Banič

ARP 482713N 0173135E666 ft (203 m)



BOLERÁZ TRAFFIC						
132,080						
RWY	MAG direction	TORA (m)	TODA (m)	ASDA (m)	LDA (m)	Strength
14	135°	1 200	1 300	1 200	1 200	5 700 kg/0,75 MPa
32	315°	1 200	1 300	1 200	1 200	5 700 kg/0,75 MPa

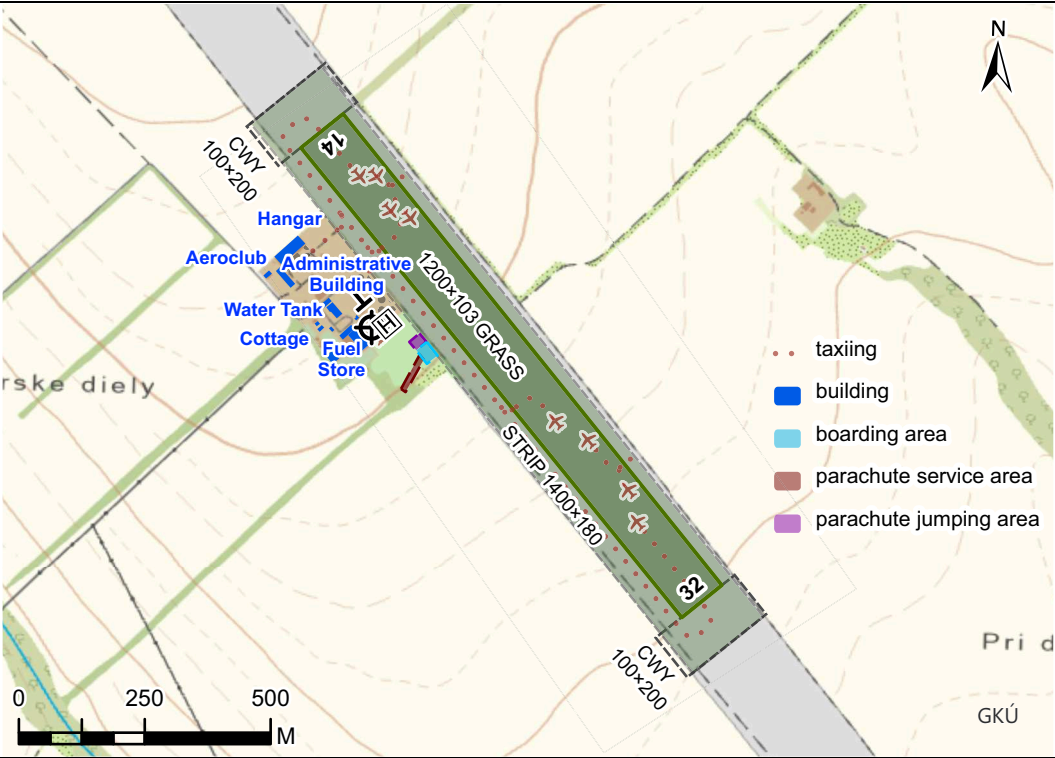

 All the year, snow clearance is not provided.

 NIL

 In the village Boleráz.

 NIL

 NIL

 Emergency call: 112
Hospital in the town Trnava.

 In the village Boleráz.

 Taxi, bus

1. Local traffic regulations

Circling shall be executed at MNM 1 000 ft (300 m) AGL except residential zone to north only.

2. Charges

4 EUR/landing, parking O/R.

3. Additional information

Aerodrome operator - Aeroclub Trnava

Capacities for hangaring and airport accommodation are limited, it is recommended to contact aeroclubs.

Other subjects operating at the aerodrome:

Blue Sky Service

Aerorelax

Aeroklub Bratislava - www.aeroklub-ba.sk

Flight Schools:

- EuroServis AERO, s. r. o. (Aircraft) - www.2345.sk
- UL - Helicopters, s. r. o. (Helicopters) - www.ulhelicopters.sk
- ULPilot.sk (Flight Academy for Ultralight) - www.ulpilot.sk